

Name In Display

The Name-In-Display must be Programmed at each station by the User.

Used for Station Identification & Internal Caller-ID

Each Character requires a 2-digit Entry.

Maximum Length is (7) characters.



 
Letters

Space = 11	A = 21 B = 22 C = 23	D = 31 E = 32 F = 33
G = 41 H = 42 I = 43	J = 51 K = 52 L = 53	M = 61 N = 62 O = 63
P = 71 R = 72 S = 73 Q = 74	T = 81 U = 82 V = 83	W = 91 X = 92 Y = 93 Z = 94
* = *#	0 = 0#	# = ##

Numbers & Characters

1 = 1# : = 12 - = 13 ' = 14	2 = 2# . = 24	3 = 3#
4 = 4#	5 = 5#	6 = 6#
7 = 7#	8 = 8#	9 = 9#
! = *1 \$ = *2 & = *4	" = 01 , = 02 ? = 03 / = 04	(= #1) = #2 + = #3 = = #4

Example for "CONF RM"



To Erase your Name

